


iMPULSE TECHNOLOGY

INSTRUCTION MANUAL - MAGNETIC IN CAR PHONE HOLDER




Installation instructions:

1. Stick magnetic circle (need to double check the shape of magnet) on the back of your phone case.
2. As diagram shows Open the clamp of the car vent and insert into fan blade of air outlet.

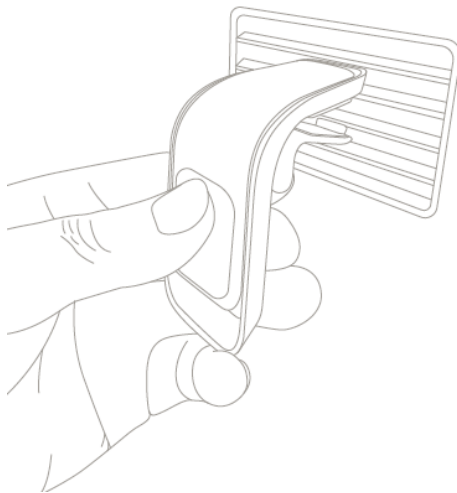

3. With Magnet in place on Phone and Holder in place in Vent, the phone can now be placed on the Magnetic Holder.

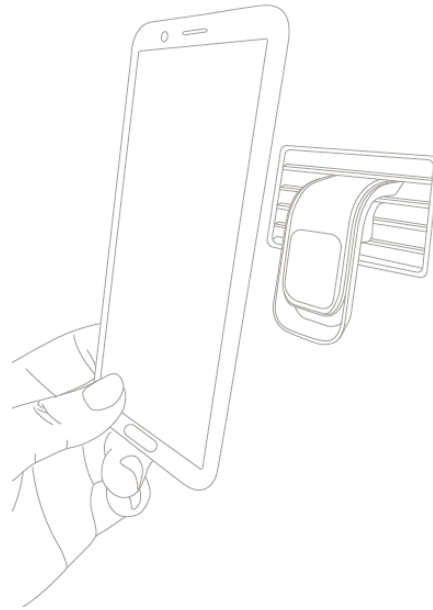

4. To disconnect, gently pull your phone off the car vent.

Warranty:

This product has a 12 Month warranty: Warranty is Null and Void if product has been 'Abused or been exposed to Moisture'

All warranty claims to be returned to retailer where purchased.



QR code – visit www.buyonimpulse.com.au